

**Change an Orchestra Voice within a SET memory.**

1 Turn on accordion and choose which set memory number you want to work with. Use the 2 small black buttons near your chin marked SET – (minus) or + (plus) Write that SET number down for later recall.

2 Turn on ORCH tab (right hand controls)

3 Choose which one of the 14 register tab sounds you want to change. Make a note, write the register number down.

4 Hit > button (the one pointing to the floor). Screen shows current reg. number in small print and shows the Roland sound number in large print.

5 Use – or + buttons to change sound. (Note these sounds will be the basic, unedited sounds from the accordion internal memory.)

6 When happy with new sound, SAVE to SET memory. PUSH and HOLD, Menu/Write button. See SYS in screen. (You do not want to save this change to the system memory.)

7 Push + button briefly. See SET in screen.

8 Push > button briefly. See Set number in screen. This should be the same number as you wrote down earlier.

9 Push > button 9 times until you see Write? Y N in screen

10 Push ENTER/YES button to permanently save this change.