

Adjust Orchestra Bass levels Roland FR-8x in the TURN ON Set.

- 1 Power ON accordion and turn ON Orchestra Bass (this adjustment affects the Orchestra Bass Level in the TURN ON set.
- 2 Push MENU/WRITE button (see Menu 1 Tuning in LCD screen)
- 3 Turn DATA entry knob 7 clicks to Page 8, Orch Bass Edit
- 4 Push in DATA entry knob, see Page 8.1 (tone selection)
- 5 Turn DATA entry knob 1 click clockwise, see Page 8.2 (tone control)
- 6 Push DATA entry knob IN three times to highlight Volume window (in yellow)
- 7 Adjust bass level by rotating the DATA entry knob.
- 8 Play the accordion to find the level you prefer. This new edit must be saved or it will be lost when the power is turned off. [this SAVE info is also on page 42 and 43 of the owner manual]
- 9 To SAVE: Push and hold MENU/WRITE button until screen changes to WRITE. The first type in highlight is "System".
- 10 Turn DATA entry knob 1 click to "SET" (highlight in yellow)
- 11 Push MENU/WRITE button 1 time (see Set 100 in screen – this is where Dale Mathis turn-on set is stored)
- 12 Push MENU/WRITE button 2 times (see clock hands moving) The new setting has been memorized.
- 13 Push Exit/Jump button to exist the editor. The new setting has been saved to the Orch. Bass sound when the accordion is first turned on (which is the sound stored in Bass Register #1). If you want to adjust the level of any of the other 7 bass sound registers in the Turn On set, the process above must be repeated by starting with the new register button sound. So, if you want to adjust the level of the sound in register #4, you must turn on the accordion, turn on Orch. Bass, then turn on Bass Register #4. From this point, you repeat the process above, starting with Instruction 2.

To Adjust the Orchestra Bass levels in a USER PROGRAM

- 1 Power ON accordion, turn on USER PROGRAM and select the USER PROGRAM number in which you want to adjust the Orch. Bass level.
- 2 Turn OFF the USER PROGRAM button. Follow Steps 2 – 9 above.
- 10 Turn DATA entry knob 2 clicks to "USER PROGRAM"
- 11 Push MENU/WRITE button 1 time (see the Bank and Register number of your User Program. Do not change anything in this screen.)
- 12 Push MENU/WRITE button 2 times (see clock hands moving) The new setting has been memorized.
- 13 Push Exit/Jump button to exist the editor.
- 14 Turn on User Program button to go back to the User Program you wanted to edit. Verify that your bass level is where you prefer, if not, repeat the process.
- 15 This process must be repeated for each User Program registration you would like to modify.