

FR-4x Fixed Bellows Setting

- 1 Turn on accordion
- 2 Push and hold white SHIFT button (near your chin)
- 3 While holding SHIFT, push Register 7 (BELLOWS CURVE)
- 4 Look in LCD screen to see current setting. (Dale Mathis Normal = LIGT)
- 5 Use + or – value buttons (near your chin) to change setting. I suggest changing to **FIXM** which means fixed medium. FIXL will give you low volume, FIXH will give you loud volume but may cause some sounds to be distorted.
- 6 With FIXM setting you do not need to open the bellows straps. The accordion Volume control is now the only means of changing the volume.
- 7 This setting will remain with the accordion when the power is turned OFF.
- 8 Repeat the process if you wish to try another setting.
- 9 If you want to return to the original setting, follow above instructions and change setting to LIGT.